
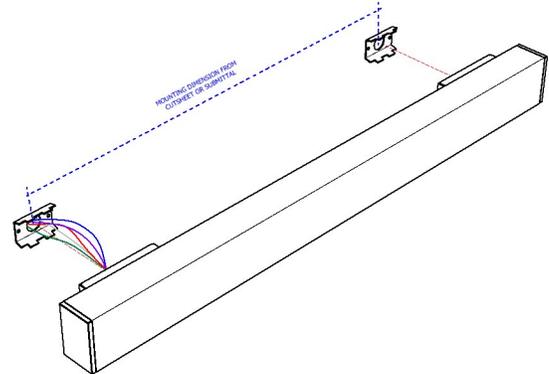




These instructions cover most instances of wall mounted Bartco fixtures, for both integral and remote driver operation.

1. Mount inner wall brackets to dimensions shown in submittal or cutsheet. Run fixture wires through bracket and wall to JBOX (by others).

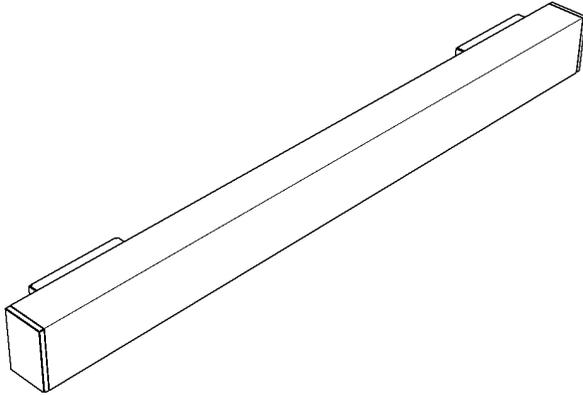



2. Remove set screws from outer wall bracket. Then place fixture onto mounted inner wall brackets. May need to rotate fixture to set in place properly.

3. After fixture is placed properly over wall brackets, replace set screw in bottom of bracket to lock into place.

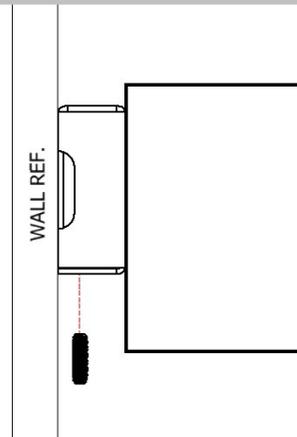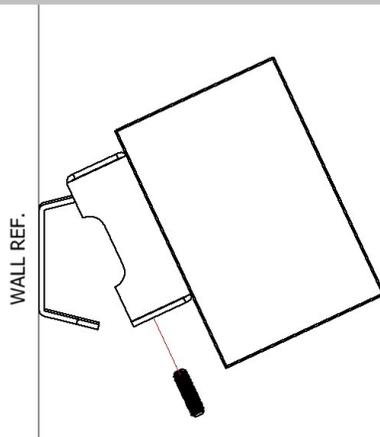

4. Complete all necessary wiring connections in JBOX (by others) behind wall.

5. Confirm fixture operates as intended.

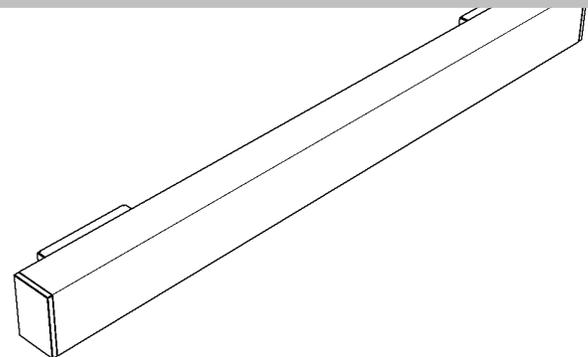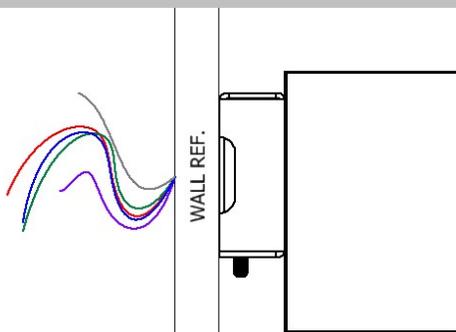

NOTE: For **EMERGENCY** wet listed fixtures, make sure driver box is mounted in dry location.

Warnings and Information ⚠️ ⚠️ ⚠️

- Risk of shock or fire. Disconnect power before installing or servicing.
- LED installation requires knowledge of luminaire electrical systems. If not qualified, do not attempt installation.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

©2025 Bartco Lighting, Inc. These products are protected by patents and patents pending. Unauthorized use or reproduction of illustrations, photographs or text is prohibited. Bartco Lighting reserves the right to discontinue products or to change the technical and/or design specifications at any time.